



Instructions for installing the heatsink



 

202508

www.thundercomm.com

Copyright Thundercomm Technology Co., Ltd. 2016-2025 All right reserved






Step 1: Connect the fan

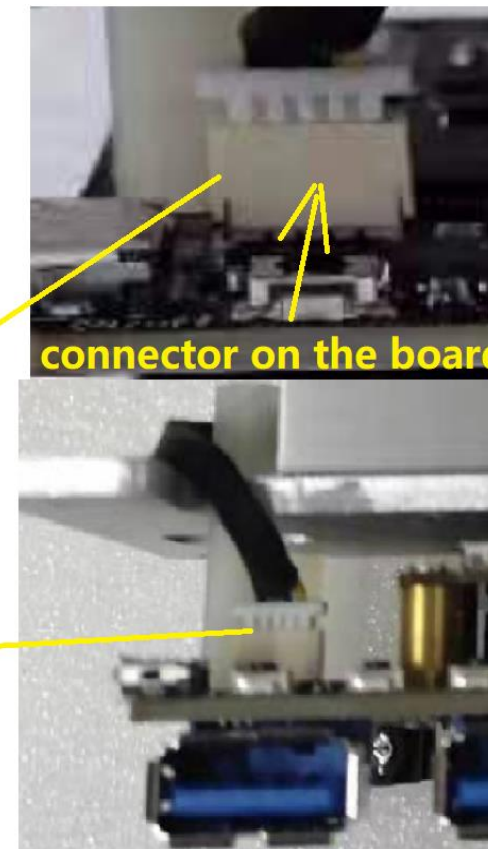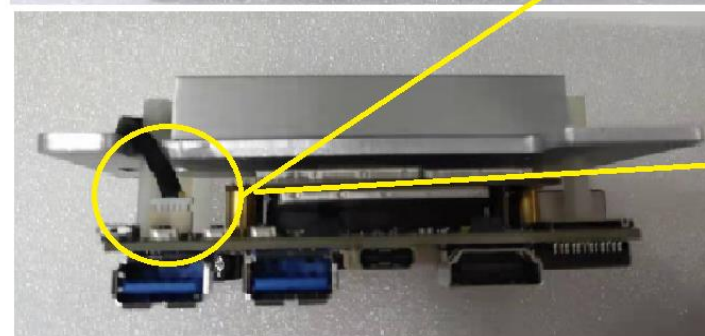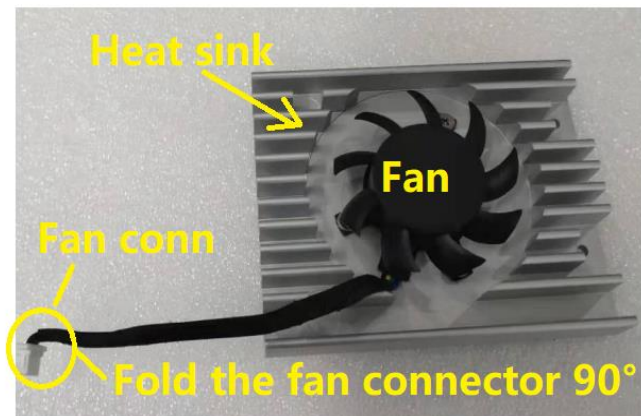

Fold the fan connector 90° and plug it into the connector on the board.
(把风扇连接器位置折90度，插入板端的连接器)

 Step 2: Fix the heatsink


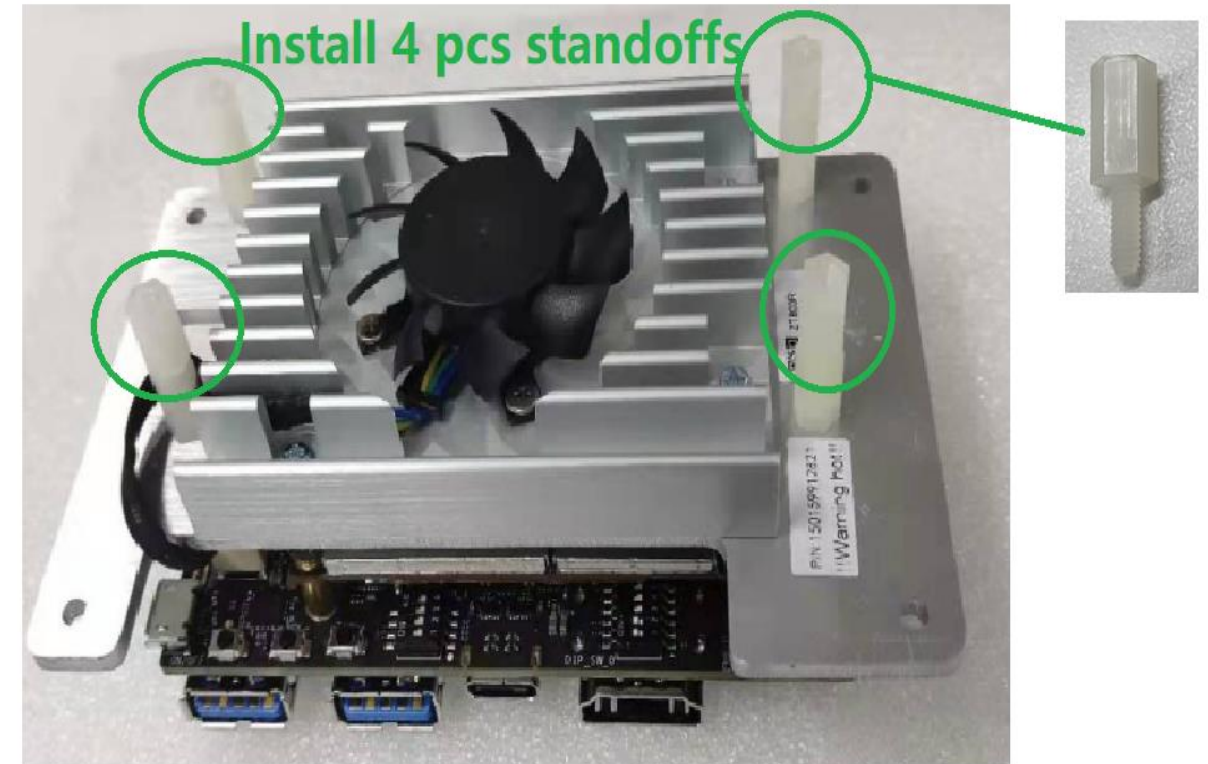

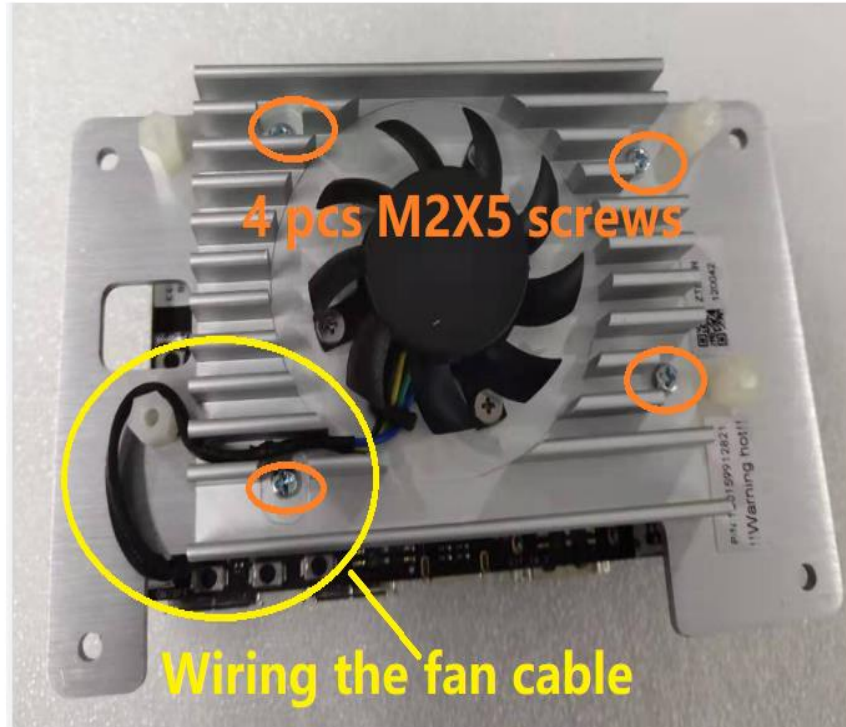


Wire the fan cable, use four M2X5 screws to fix the heatsink on the thermal plate, then install four standoffs.

(把风扇线走好线后，使用4个M2X5螺丝把散热模块固定在散热板上，再装上4个螺柱)

Enriching an Intelligent World!



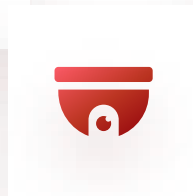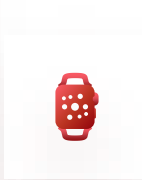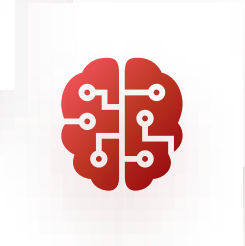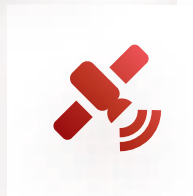

Thundercomm

Empowering Every IoT Device with Our Technology

San Diego, USA

5405 Morehouse Drive Suite 210
San Diego CA 92121

✉ service@thundercomm.com

Beijing, China

ThunderSoft Building, Building 3, No.9
Qinghua Dong Road, Haidian District,
Beijing, China,100083

✉ service@thundercomm.com

Tokyo, Japan

9F Osaki wiz tower Building, 2-11-1
Osaki, Shinagawa-Ku, Tokyo, Japan,
141-0032

✉ service@thundercomm.com

Seoul, Korea

#401, 4fl, Uspace 2-B, 670,
Daewangpangyo-ro, Bundang-gu,
Seongnam-si, Gyeonggi-do, 13494
Korea

✉ service@thundercomm.com

Ulm, Germany Ulm

Magirus-Deutz-Str. 13 89077 Ulm

✉ service@thundercomm.com

www.thundercomm.com

Copyright Thundercomm Technology Co., Ltd. 2016-2025 All right reserved